



INSTRUCTIONS FOR CARCAPSULE SETUP

1. SELECT YOUR PLACE OF SETUP BY CONSIDERING THE FOLLOWING:

- A. The start of zipper location should also be the location of the electrical source.
 - B. The air intake should be away from outside doors and heat sources.
 - C. The surface should be as flat as possible.
 - D. The basemat should be located with all sides accessible to work the zippers.
 - E. If the temperature is below 50 degrees, open the CarCapsule box and let the CarCapsule stay in room temperature for 24 hours. This will make the setup much easier.
2. Roll the vehicle onto the basemat leaving equal distance on all sides. Take care not to turn the steering wheel while on the basemat. If the exhaust system is at all hot, be very careful not to touch any part of the Carcapsule with it.
 3. Insert the fan panel into position, smooth out the Velcro.
 4. Push the male connector thru the slit in the basemat. Connect the male end to the female end connector of the fan motor.
 5. Starting at the fan end, carefully drape the clear center section over the vehicle's hood, roof and trunk. Zip both zippers closed securing the tops and sides. For silver outdoor model: You will find a 2" plastic strip that you must insert inside fan shroud before inflation. This will keep shroud open.
 6. Plug the 12V transformer into your wall outlet and your CarCapsule will start to inflate. After the bubble is completely inflated, insert the filter by pushing the brim inside the flap around the fan.
 7. To increase airflow thru the cover to dry wet vehicles or to regulate the air pressure in extremely hot weather, simply readjust the rear zipper closure to allow more air to flow through the capsule. On the average the CarCapsule will change its air volume 3 to 4 times per hour.
 8. For the Silver Outdoor Model: The outdoor model has tie-downs to prevent movement of your bubble in the wind. The loops for the tie-downs are located on each side of your bubble.
 - A. Attach a string to an eyelet on the top of the bubble. Tie a secure knot.
 - B. If you wish to attach bubble to ground. Drive a stake into the ground at a forty-five degree angle away from your bubble. Attach the string to the stake. Repeat **A** and **B** on other side of your bubble. Stakes are not included and can be purchased from your local hardware store.
2. Do not put any material under the floor section, it will only trap moisture! This can create mold or mildew.
 3. Locate the air intake filter away from outside doors or sources of heat such as water heaters, furnaces, roll-up metal doors or washer/dryers.
 4. Keep the air filter clean by hand washing in warm water. You may use mild dish soap if necessary.
 5. Do not place any source of heat inside the cover (not even a light bulb).
 6. If CarCapsule is first used in extremely cold climates, blow up in a warm area to help PVC become pliable.
 7. When you set up your CarCapsule for the first time, it will have a lot of wrinkles. As it is kept inflated, the remainder of the wrinkles will work themselves out.
 8. If your CarCapsule gets dusty you can use a car duster. To remove stains, use warm water and mild dish soap.

MANUFACTURER'S GUARANTEE

The CarCapsule is guaranteed for one year against all defects in workmanship and materials. Repair or replacement will be made upon receipt of product by CarCapsule freight prepaid. Please contact the place of purchase prior to shipping for warranty work.

THE OUTDOOR CARCAPSULE IS NOT GUARANTEED AGAINST ALL WEATHER

The outdoor CarCapsule is not guaranteed to withstand high winds or heavy snow. Please use the Outdoor CarCapsule with caution during unfavorable weather, severe weather, and natural disaster conditions.

THIS WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY GIVEN WITH RESPECT TO THE PRODUCT AND ALL OTHER EXPRESS WARRANTIES ARE HEREBY EXCLUDED, INCLUDING THE WARRANTY OF IMPLIED MERCHANTABILITY. NEITHER PDK/CARCAPSULE NOR AN AUTHORIZED PDK/CARCAPSULE PRODUCT DEALER WHO SELLS THE PRODUCTS IS RESPONSIBLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION ON IMPLIED WARRANTIES AND/OR THE LIMITATION OR EXCLUSION OF CERTAIN DAMAGES MAY NOT APPLY TO YOU.

**IF YOU HAVE ANY QUESTIONS,
PLEASE CALL US AT 1-219-947-1735**

www.carcapsule.com

CARE INSTRUCTIONS FOR CARCAPSULE

1. The clear unit is for indoor use ONLY. The silver unit is for outdoor use.